







Monteringsanvisning

Dusjhjørne

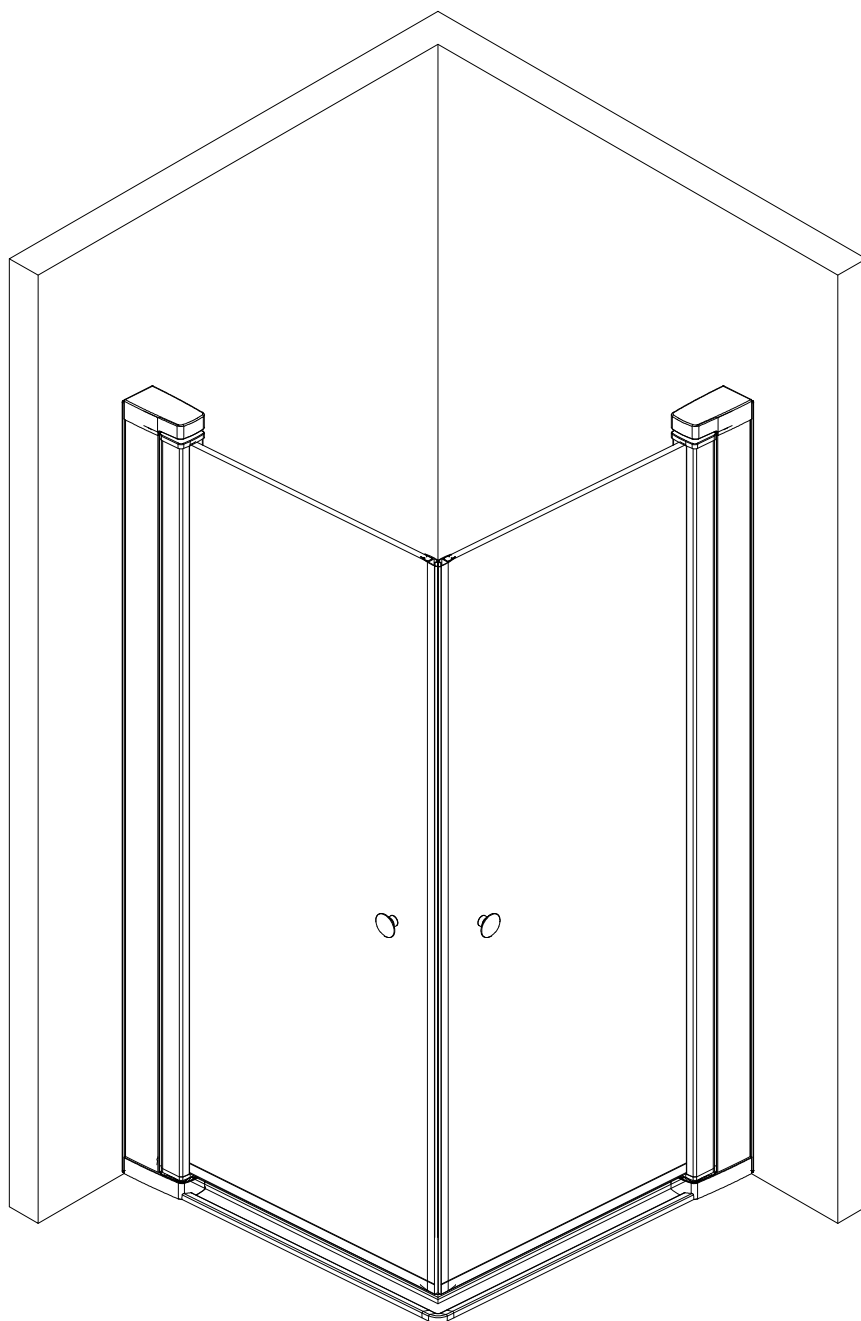


Art. nr. 10023 (90x90 cm)
Art. nr. 10024 (80x80 cm)



sanipro
Kvalitet & Design

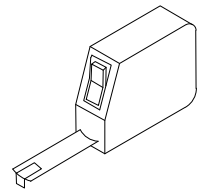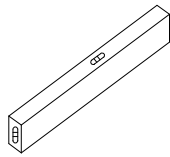











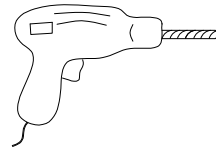


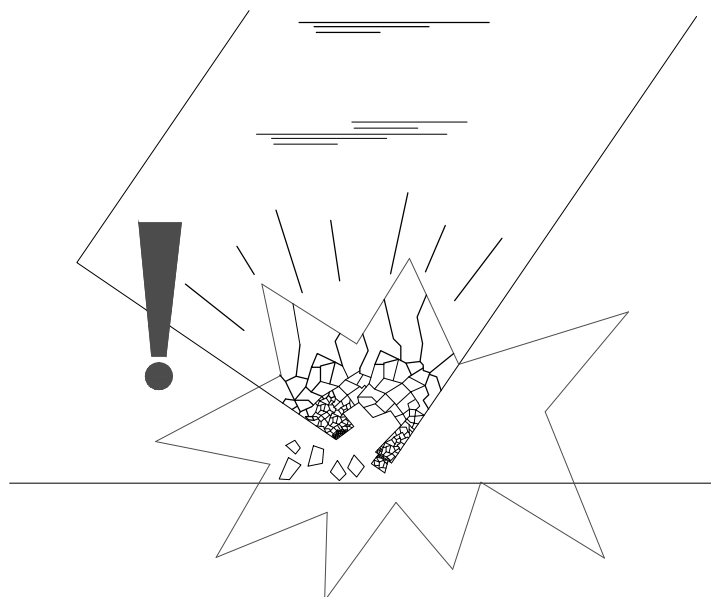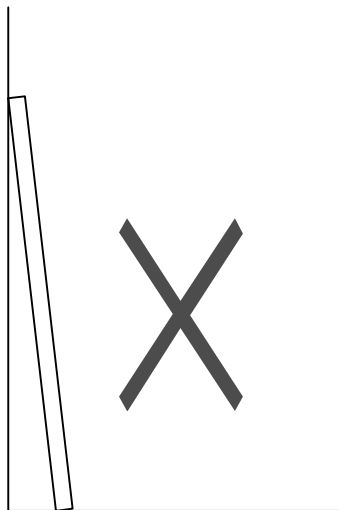


Ø6

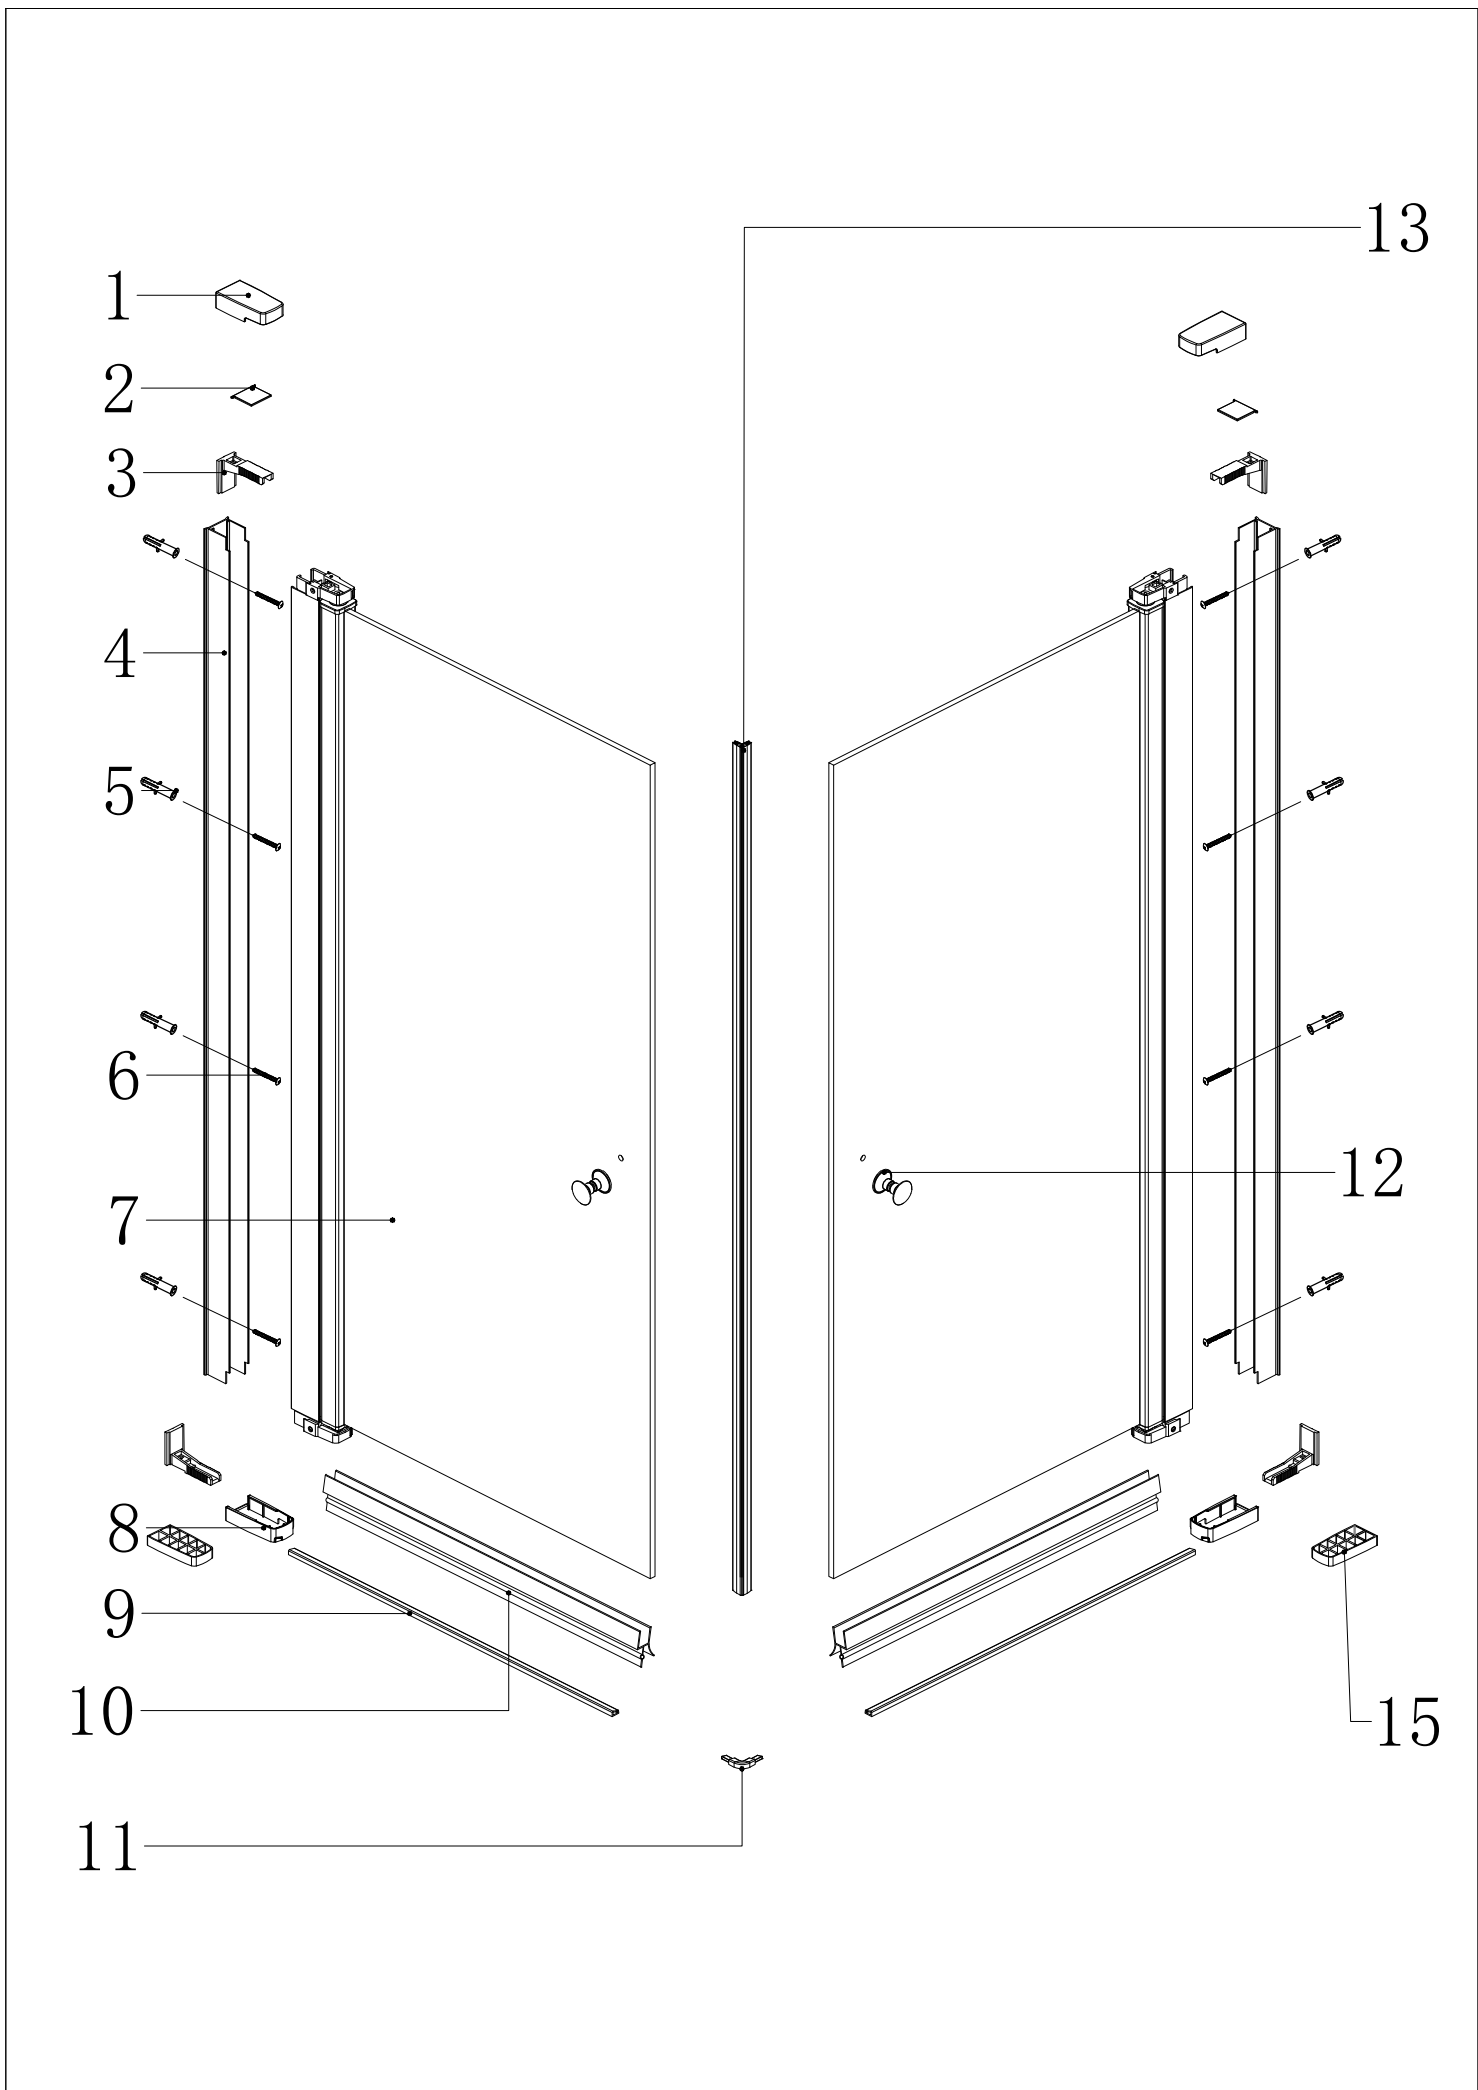

NB! Husk å legg beskyttelse under glasset før det settes på gulvet.
Eksempel: papp, håndkle etc.






serial number	graphical	Parameter	quantity	remarks
1			2 PCS	
2			2 PCS	
3			4 PCS	
4			2 PCS	
5		∅6	8 PCS	
6		ST3.9X35	8 PCS	
7			2 PCS	
8		L/R	2 PCS	
9			2 PCS	
10			2 PCS	
11			1 PCS	
12			2 PCS	
13			1 PCS	
14		M3	1 PCS	
15			2 PCS	

MONTERINGSMÅL


Størrelse	Monteringsmål
80x80 cm	80 cm
90x90 cm	90 cm

Monteringsmålet (A-mål) = fra hjørne til ytterkant av dusjprofil





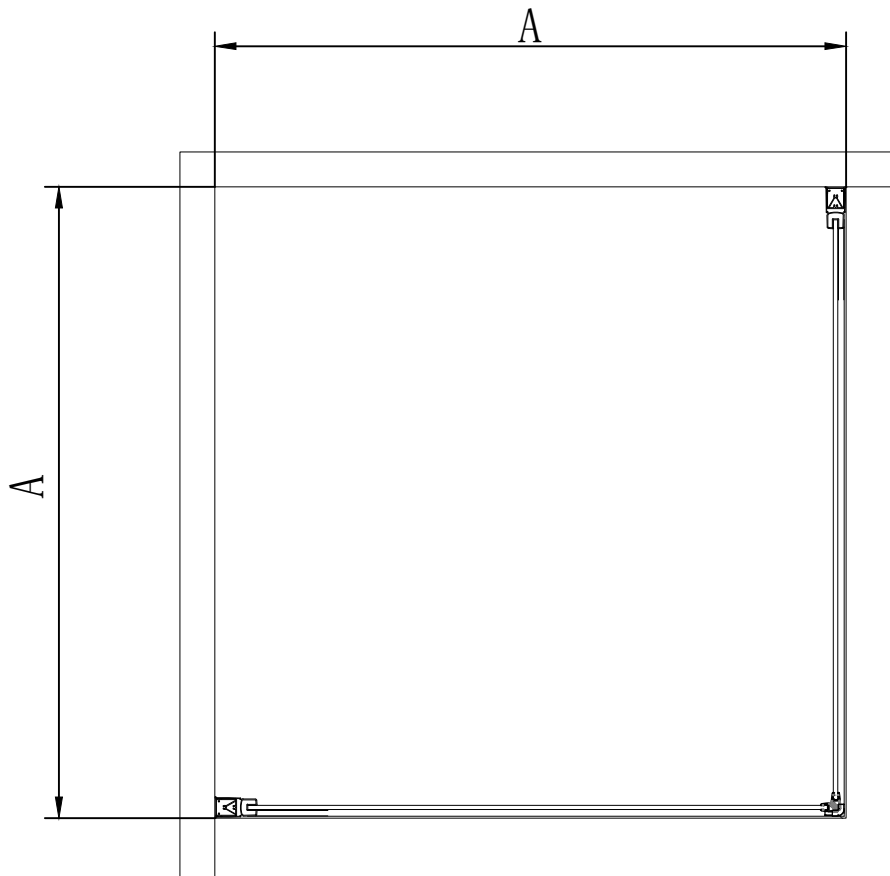








Viktig at veggprofilene monteres i vater!

Montering av veggprofiler








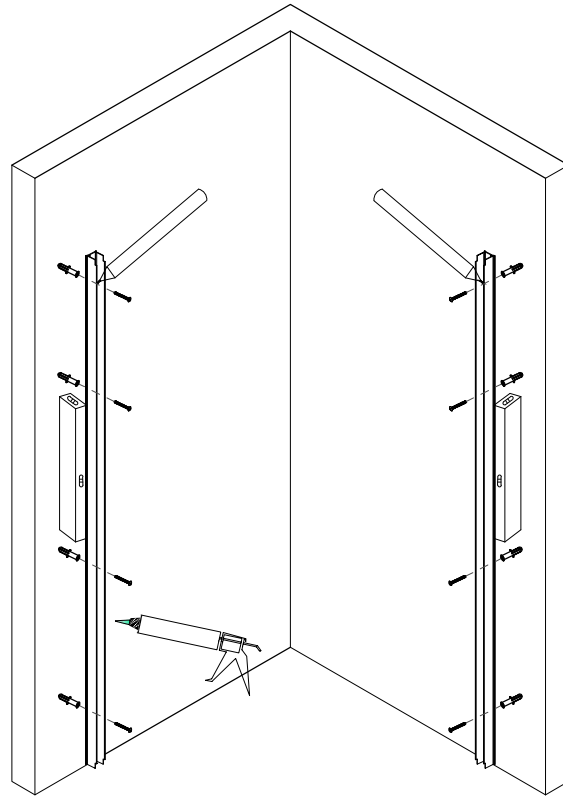


Ved behov, påfør tynt lag med sanitærsilikon langs veggprofil før montering

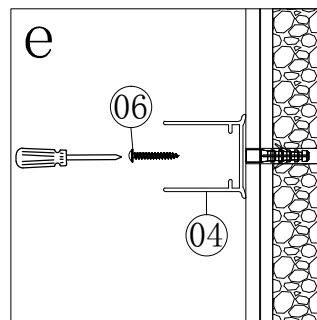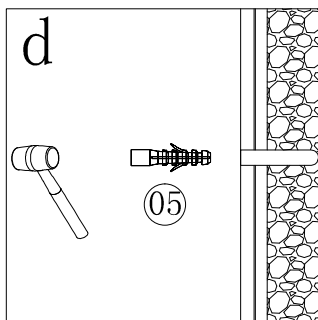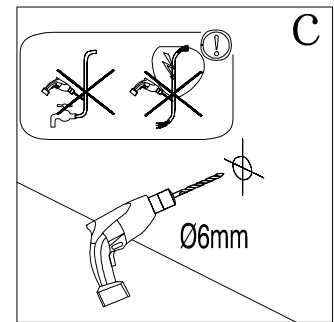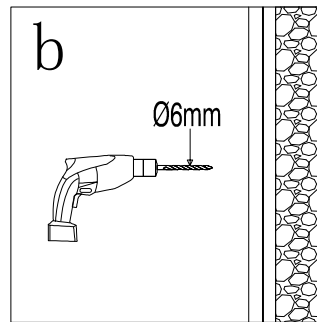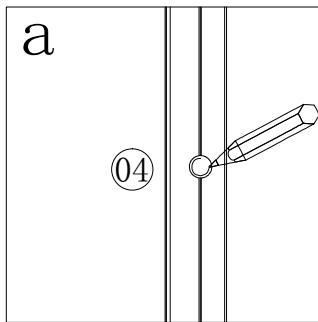

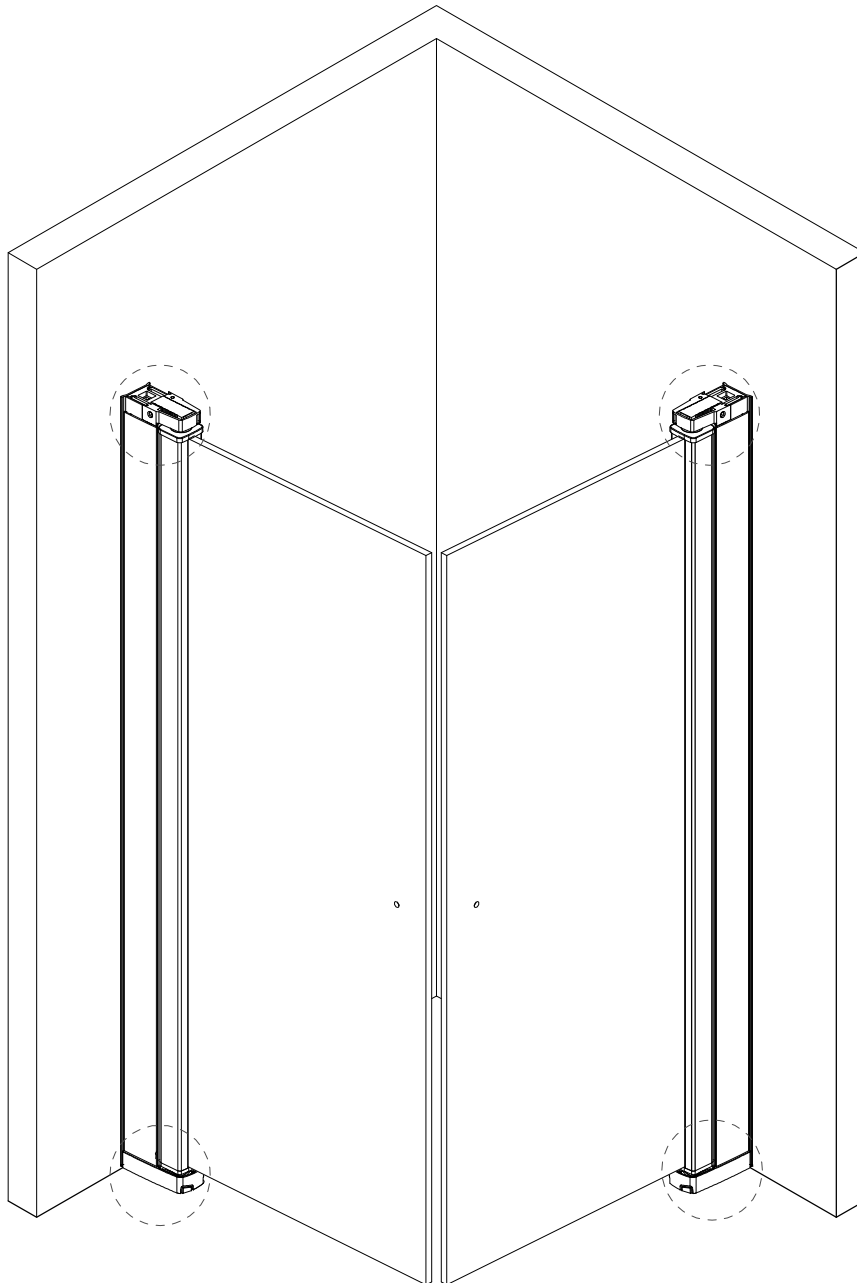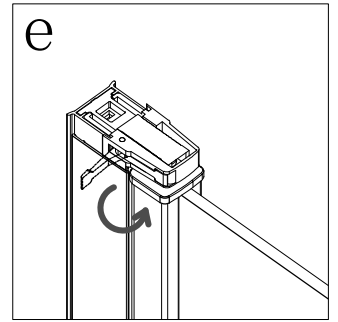
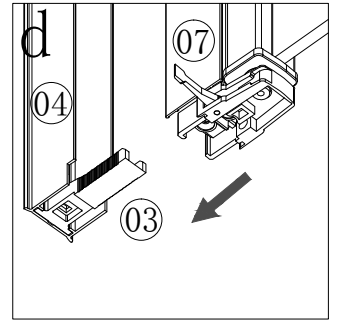
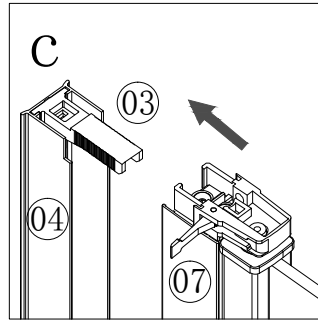
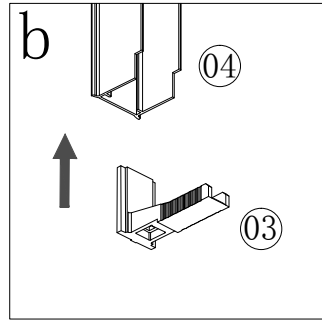
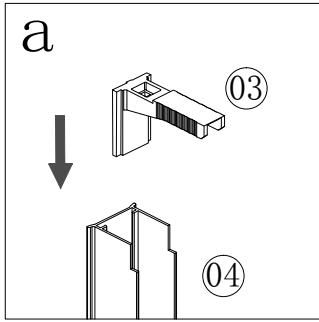


Figur e:
Strammehendel vries
oppe og nede når
døren er montert
i ønsket posisjon.

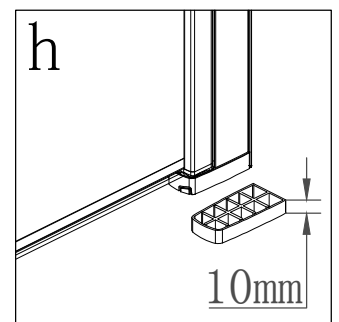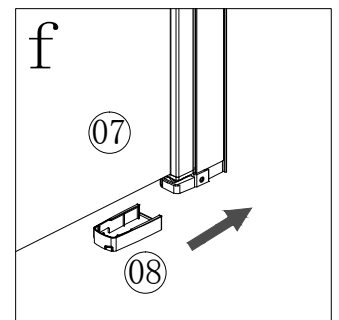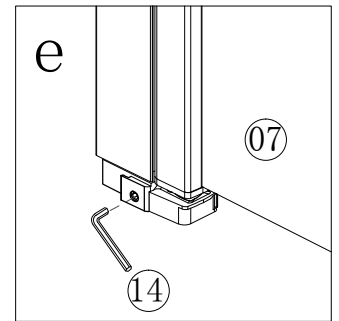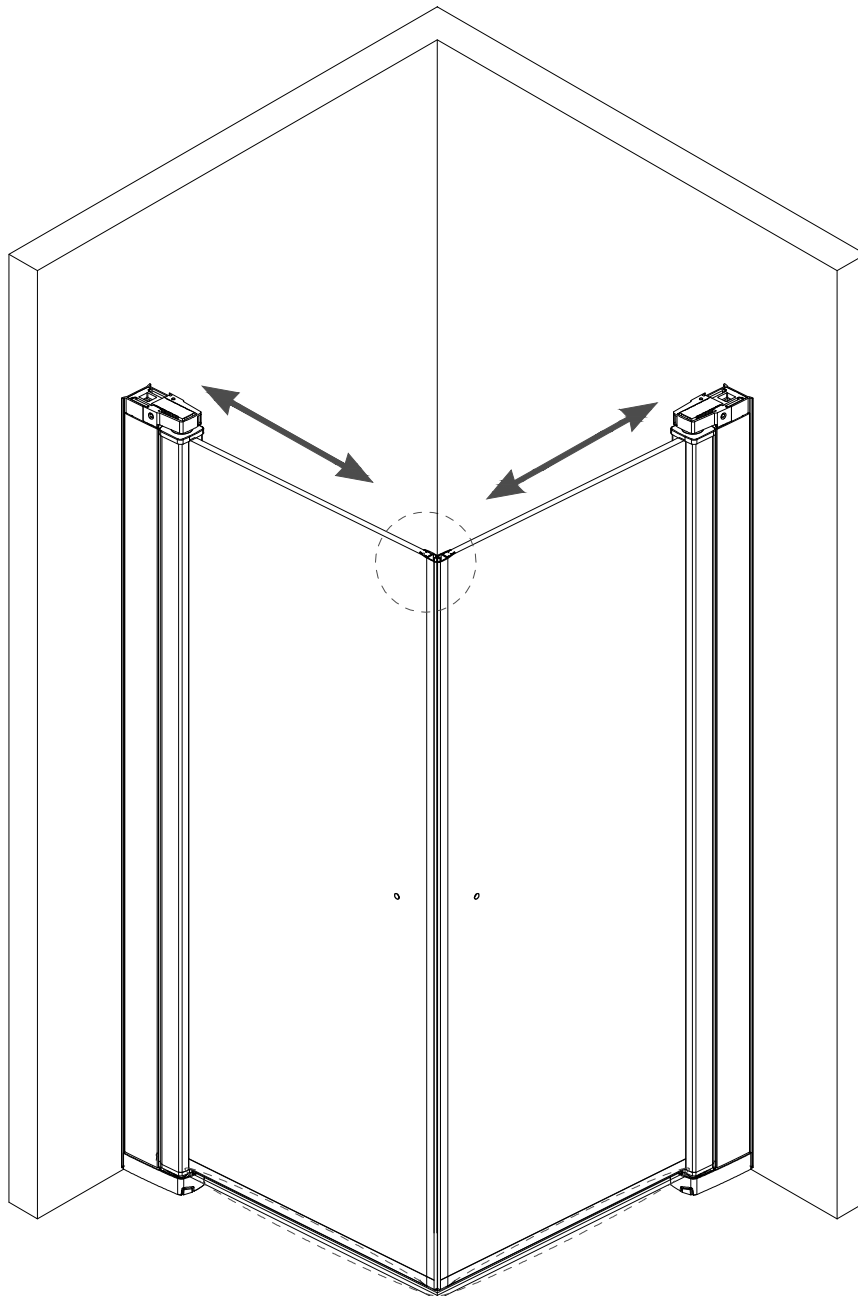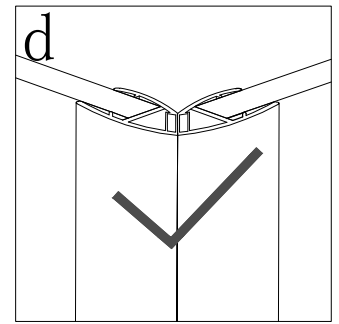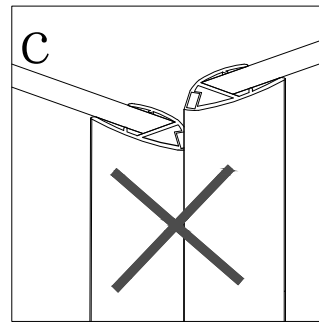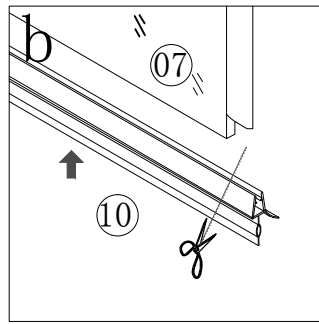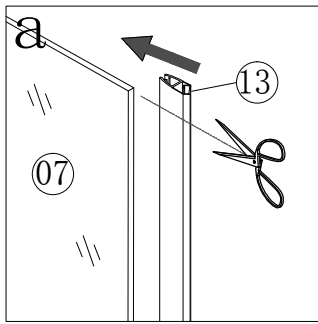

Figur e:
NB! Husk å stramme settskruene skikkelig ved montering.

Figur f og h:
Dusjdøra må ha understøtte.

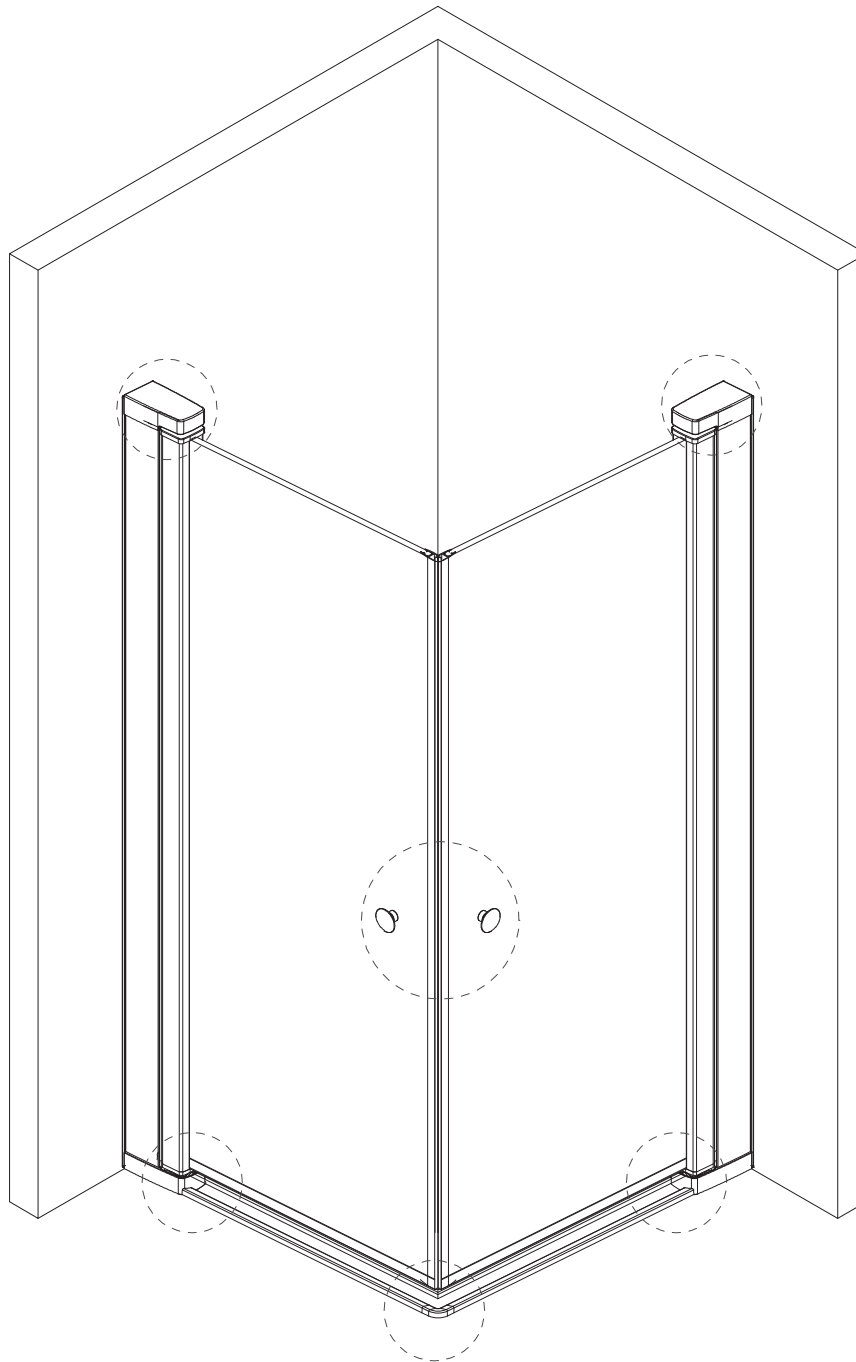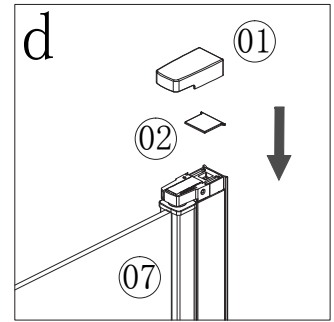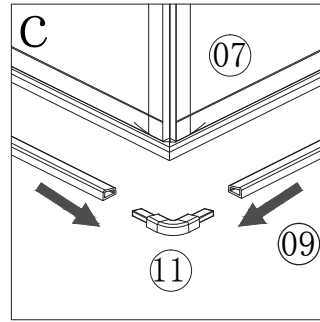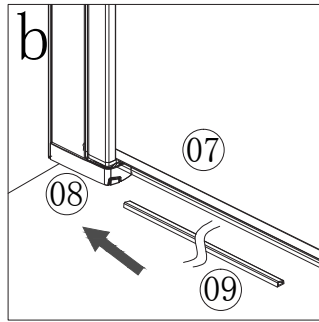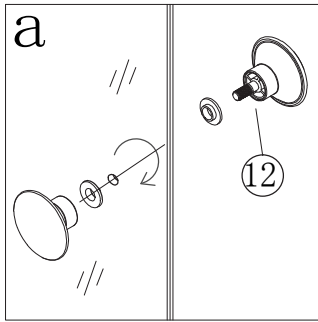

<5>

